


Reference Guide G266

G266 Front View



G266 Side View

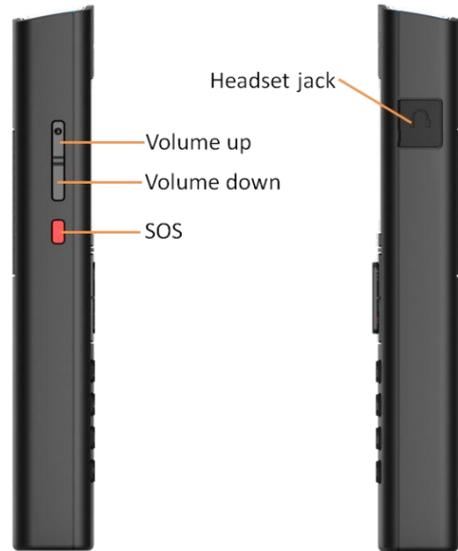

Package Contents

- G266 DECT Handset
- Battery
- Belt clip (incl. name plate cover)
- Name plate cover
- This Reference Guide
- Additional Information sheet


To use the G266 for the first time

- Open the battery lid;
- Remove the plastic strip from the battery contacts;
- Close the battery lid;
- Place the G266 on the charger to fully charge the battery.

Main Menu Items



Top Line Icons

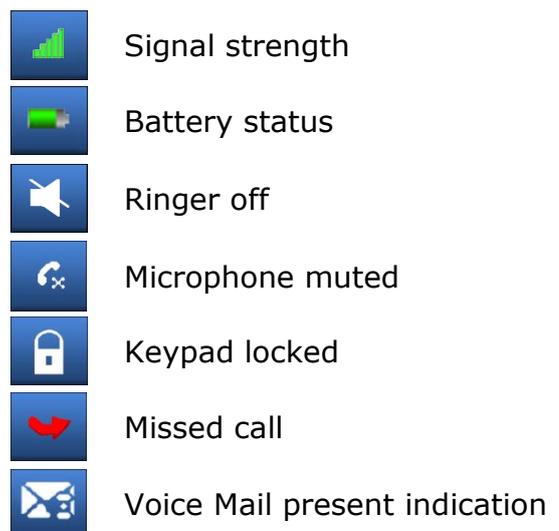

GETTING STARTED

Turning the phone on and off

Press and hold  for a few seconds.

Activating your phone

When the display of your phone is dark, press any key to activate your phone (phone in **Idle** mode).

Lock/unlock your phone

Press  and then  (toggle function).

Make a call

1. Press  and then type the number you want to reach **OR**
2. Press  and then type the number you want to reach (speakerphone call) **OR**
3. Type the number you want to reach and then  or  **OR**
4. Use a speed dial key ( .. ) **OR**
5. Press soft key  or  , select the required contact and press soft key  ,  or  .

Answer a call

Press  or, for speakerphone call,  .

End a call

Press  .

Make an enquiry call

During a call, press  and dial the number of the party you want to consult. Press  to toggle between the two parties.

Press  to transfer the call.

Change the volume

During a call, press "Volume up" or "Volume down" on the side of the phone.

Use the speakerphone

During a call, press  ; to deactivate: press  again.

Mute the microphone during a call

Press soft key  . To turn the microphone on again, press soft key  .

Assigning a contact to a speed dialling key

In **Idle** mode, press soft key  , select the contact you want to assign to a speed dialling key and press soft key  . Choose  and press soft key  .

Use the navigation keys to scroll to the appropriate number (2..9) and press soft key  .

Register the handset

In **Idle** mode, press  , use the navigation keys to select  and press soft key  .

Use the navigation keys to select  (*Connectivity*) and press soft key  . Use the navigation keys to select  (*Register*) and press soft key  .

Enter the requested registration information (contact your System Administrator for this). Wait for the registration to be completed.

MENU FUNCTIONS

Using the menu

In **Idle** mode, press  to access the main menu. Use the navigation keys to go to the required menu, menu tab and menu item. Use soft key **Select** (or press ) to select the chosen menu or menu item/tab. Other soft keys may provide additional options.

To go back one step in the menu or leave it altogether, press .

Menu list

- 1.  **Contacts**
 -  *List of contacts*
- 2.  **Central Directory**
 - *Select required contact by name*
- 3.  **Calls**
 -  *All calls*
 -  *Answered calls*
 -  *Dialed calls*
 -  *Missed calls*

} Actions on calls lists:

 - Call
 - View details
 - Save as contact
 - Add to contact
 - Edit before call
 - Delete (all)
- 4.  **Settings**
 -  *General settings*
 -  *Silent*
 -  *Time & date*
 -  *Language*
(Supported: English, Spanish, German, French, Italian, Dutch, Danish, Swedish, Turkish, Polish, Norwegian, Greek & Russian)
 -  *Shortcuts (for the navigation keys)*
 -  *LED signal*
 - *Green LED*
 - *Yellow LED*
 - *Red LED*
 -  *Security*
 - *Automatic key lock*
 - *Change PIN*
 - *Proxy password*
 - *Phone lock*
 -  *Handset name*
 -  *Reset settings*
 -  *Status*
 -  *Sounds - normal &*
Sounds - silent
 -  *Incoming call*
 -  *Ring volume*
 -  *Ring external/internal/ unknown*
 -  *Increasing ring & Increasing alert*
 -  *Vibrator*
 -  *Feedback*
 -  *Key sound*
 -  *Confirmation sound*
 -  *Coverage warning*
 -  *Charger warning*

-  **Settings (continued)**
 -  *Display*
 -  *Wallpaper*
 -  *Startup screen*
 -  *Power save*
 - *Calls*
 -  *Units*
 -  *Answer mode*
 -  *Emergency call*
 -  *Voicemail number*
 -  *Silent charging*
 -  *Missed call time*
 -  *Connectivity*
 -  *Register*
 -  *Deregister*
 -  *Select network*
 -  *Edit network*